

# *T-PRINT G0841(-W)*

**Temperature recorder with printer for external installation on semi-trailers**

**Instruction manual**

## CONTENT

<b>1.0</b>	<b>BASIC RECORDER FEATURES</b> .....	<b>3</b>
<b>2.0</b>	<b>INSTALLATION OF THE RECORDER</b> .....	<b>3</b>
<b>3.0</b>	<b>RECORDER CONFIGURATION BEFORE FIRST OPERATION</b> .....	<b>6</b>
<b>4.0</b>	<b>USING OF RECORDER</b> .....	<b>7</b>
4.1	RECORDER CONTROLS.....	7
4.2	BASIC DISPLAY READINGS.....	8
4.3	PRINTOUT OF RECORDED VALUES ON BUILT-IN PRINTER.....	8
4.3.1	Printout of the Delivery Ticket .....	8
4.3.2	Printout of recorded values .....	8
4.3.2.1	<i>Selection of values for printout</i> .....	8
4.3.2.2	<i>Start of print of recorded values</i> .....	9
4.3.2.3	<i>Data contained in numerical table of values - Journey Ticket</i> .....	9
4.3.2.4	<i>Data contained in Graph Ticket</i> .....	10
4.3.2.5	<i>Stopping of printout of Journey or Graph Ticket</i> .....	11
4.3.3	Paper replacement in built-in printer .....	11
4.4	CONFIGURATION OF RECORDER FROM BUILT-IN KEYBOARD . <b>CHYBA! ZÁLOŽKA NENÍ DEFINOVÁNA.</b>	
4.4.1	Main menu .....	<b>Chyba! Záložka není definována.</b>
4.4.2	Menu 6.0 ParameterSetting.....	16
4.4.3	Structure of menu .....	20
<b>5.0</b>	<b>FUNCTIONS OF THE RECORDER CONNECTED TO THE PC</b> .....	<b>21</b>
5.1	INSTALLATION OF PROGRAM FOR PERSONAL COMPUTER .....	21
5.2	RECORDER CONFIGURATION BY MEANS OF PERSONAL COMPUTER .....	21
5.3	READING OF RECORDED DATA .....	22
5.4	ERASING OF RECORDED DATA.....	22
5.5	UPGRADE OF RECORDER INTERNAL FIRMWARE.....	<b>CHYBA! ZÁLOŽKA NENÍ DEFINOVÁNA.</b>
<b>6.0</b>	<b>REPLACEMENT OF BACK-UP BATTERY</b> .....	<b>23</b>
<b>7.0</b>	<b>WIRELESS ALARM UNIT G9000 (OPTIONAL ACCESSORY)</b> .....	<b>23</b>
7.1	BASIC FEATURES OF WIRELESS ALARM UNIT .....	23
7.2	PAIRING OF WIRELESS ALARM UNIT .....	23
<b>8.0</b>	<b>TECHNICAL PARAMETERS</b> .....	<b>25</b>
8.1	TECHNICAL PARAMETERS OF THE RECORDER:.....	25
8.2	INSTRUMENT PASSED THROUGH TESTS OF ELECTROMAGNETIC COMPATIBILITY (EMC): .....	26
8.3	TECHNICAL SUPPORT AND SERVICE OF THE INSTRUMENT .....	26

# Instruction manual for Temperature recorder with printer G0841

## 1.0 Basic recorder features

Recorder is built in a durable plastic case with transparent lid. Instrument is designed for temperature measurement and record from up to two external temperature probes and two binary signals from external contacts (it records time of monitored event, e.g. door opening/closing). Measured temperature value from both channels and actual binary inputs states are displayed on dual line illuminated LCD display and are recorded in adjustable time interval to internal, non-volatile memory. Recorded values will not be lost even in disconnection instrument from power). Record of actual or average values is user selectable including minimum and maximum temperatures. If memory is fulfilled oldest recorded values are overwritten with new values. Setting and control of recorder is performed from keyboard recorder or by means of computer. In both cases setting can be protected by password.

Recorder is equipped with alarm function. I.e. each 5 seconds (independently on adjusted logging interval) temperature is measured from both external probes, measured value from each channel is compared with two adjustable limits for each channel (including signals from binary inputs). Limit exceeding is indicated on the LCD display, by the red LED and acoustically. Alarm evaluation is possible to enable or disable for each channel. Audible indication can be also enabled or disabled.

Measured values recorded in recorder memory can be printed out in table or graph format on built-in printer or transferred by means of USB communication cable to personal computer for evaluation. Also Delivery Ticket with current temperature value(s) and header can be printed.

Recorder can be optionally equipped with radio sender for wireless alarm unit G9000.

Instrument conforms EN 12830 requirements: conditions for class 1 accuracy and is suitable for temperature record during storing (S) and transport (T) of food in climate environment code A, B. Recorder is designed specifically for external installation on semi-trailers.

## 2.0 Installation of the recorder

Recorder is delivered with installed back-up battery for internal clock. For instrument operation external power source is necessary - ordinarily semi-trailer vehicle battery. But also ac/dc adapter (optional accessory) can be used in stationary operation of the recorder (e.g. at the office).

Installation procedure on semi-trailer:

- open recorder lid and unscrew four corner screws on internal panel. Remove carefully the panel with the whole electronics out by pulling of the two panel holders and carefully place it aside **to clear, dry and electrically non-conductive place.**
- fix the recorder case by means of 4 screws of 5mm diameter and suitable length on desired place of semi-trailer. Remember, screws must endure permanent vibrations during operation!
- in planning cable routes on semi-trailer remember cables must lead to recorder lower side - to cable glands. Use cables designed for outdoor use! Use twin core cable for power with minimal conductor area of  $0.75 \text{ mm}^2$ . For routing cables use cable channels by sides of the thermo-insulating semi-trailer (if exist). All drilled holes must be finally sealed by suitable sealing material (e.g. silicon sealant). Freely installed cables must be fixed by suitable cable clips against movement along all route.
- recorder power cable lead to fuse box and connect it behind the fuse protecting truck vehicle battery, not directly on truck vehicle battery! Mind correct polarity – recorder does not work if poles are incorrectly connected, but will not be damaged. Do not insert fuse yet.
- Pull through carefully temperature probe cable without insulation damage to measured point. Locate temperature probes to places with good air circulation. Avoid places influenced by local heat sources (illuminating lamps etc.). The best place is the ceiling of the body. Due to subsequent calibrations it is also suitable to fix last meters of the cable with temperature sensor


the way enabling to remove cable from the holders and put cable to the floor to calibration device.

- similarly lead cables of door contact or other monitored device from recorder binary channels. Shielding of cable on contact side let unconnected.
- pull stripped wire ends through cable glands inward of the case in the following order (from left): power cable, channel 1 temperature probe, channel 2 temperature probe, cable, binary channel 3 cable and binary channel 4 cable. Optionally also serial interface RS232 cable (see figure, page 5).
- shorten cables to required length and form them not to be crossed (see figure, page 5).
- strip wire ends of all cables and fit them with closed crimp barrel of suitable diameter (included) and crimp by proper crimping tool. Connect wires including shielding to proper terminals. Follow description at the bottom of the case. **Careless crimping of the barrels or not using crimp barrels can cause subsequent accidental measurement failures !**
- tighten the glands to fix and protect cables against water. Unused glands must be stopped up by included seal and also tighten!
- push in the panel with electronics back to the case by means of the demounting keys and bottom it out. Unscrew demounting keys, blind two openings by seals and fix panel with four corner screws.
- insert fuse to fuse box – recorder is now switched on and would start to work.
- verify correct recorder function: display would be illuminated (always only 30 seconds after pressing a key) and green LED diode RECORD must blink, temperature readings on both channels would correspond to suspected temperature in places of installed temperature probes. If both temperatures are the same, make sure by heating one of the probes (e.g. by short holding in your hand), probe are not changed over. Make sure, if closing and opening contacts on binary channels (e.g. by door opening / closing) cause proper reading change on recorder LCD on channel 3 and channel 4 (preset symbols are ON and OFF). Test printer function by printing e.g. Delivery Ticket.

**Warning: Correct temperature measurement is subject to setting proper correction of probe cable length! Factory setting of the probe length corrections (if not differently ordered) is 5 meters for channel 1 and 20 meters for channel 2 for used cable with conductor area 0,14mm<sup>2</sup>. For setting see page 21.**

**Nor during mounting of temperature probe cable and during the operation insulation of probe cable must not be damaged! In case of short circuit of the temperature probe lead with vehicle frame recorder can be damaged! If cable insulation of temperature probe is damaged do not connect it to the recorder. Cable must be repaired or replaced.**

Recorder connection to source and temperature probes

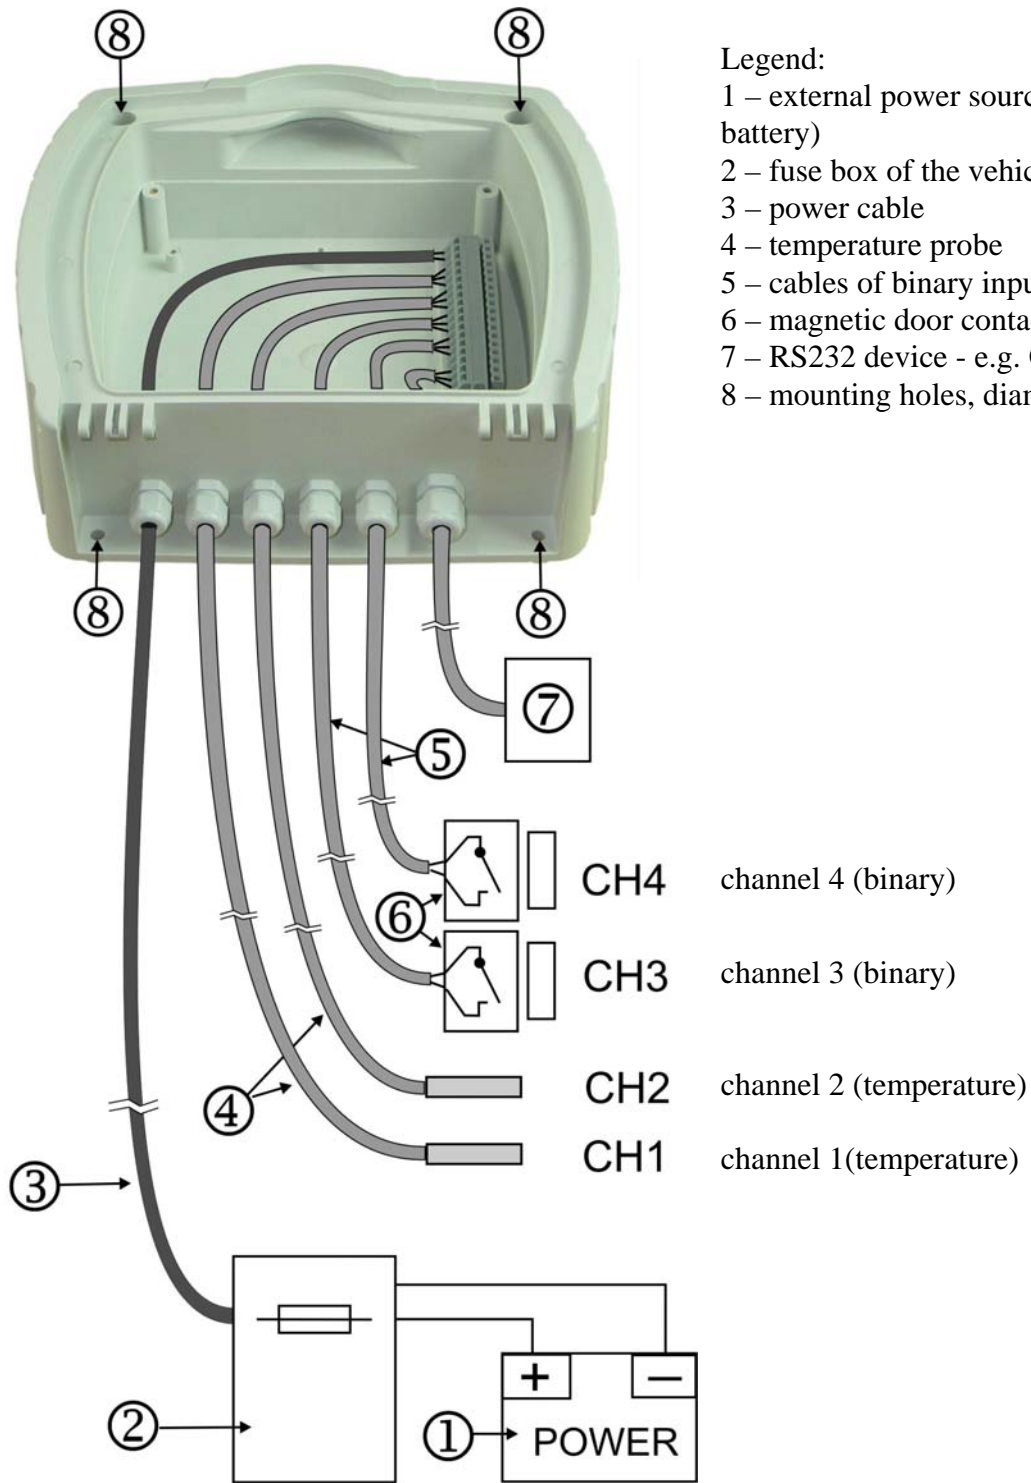

Legend:

- 1 – external power source (truck vehicle battery)
- 2 – fuse box of the vehicle
- 3 – power cable
- 4 – temperature probe
- 5 – cables of binary inputs
- 6 – magnetic door contact
- 7 – RS232 device - e.g. GSM modem
- 8 – mounting holes, diameter 5,5 mm

### 3.0 Recorder configuration before first operation

Before first operation it is necessary to set instrument from instrument keyboard or by means of personal computer with installed user software. User program is available to download free from [www.cometsystem.cz](http://www.cometsystem.cz). For recorder connection to the computer included USB cable A-B is necessary. If recorder setting is performed from the computer, recorder is powered via USB interface from computer and no other power source is needed. This could be an advantage when recorder is connected to the computer out of its fixed installation.

Before measurement it is necessary:

- select language of recorder menu (only before first use)
- check, optionally set real time in recorder
- select unit of temperature measurement (°C, °F)
- select suitable logging interval
- select logging mode (actual value, average value or average value+min+max)
- check for each channel, optionally set by means of computer type of connected temperature probe (Pt1000 or Ni1000) and the cable length correction. This setting is necessary for correct measurement and is not enabled from recorder keyboard. For details see page 21.
- disable channels not to be recorded (e.g. without connected probe)
- if using alarms, set for each temperature channel lower and upper limits and enable alarm
- if using alarms, set for each binary channel state of binary input to activate alarm and enable alarm
- set for each channel delay of alarm
- enable or disable audible alarm indication
- if suitable, enter text description of each channel and location of recorder
- if suitable, enter desired contain of printout header
- if necessary avoid unauthorized setting of recorder by entering password (PIN code)

Recorder is not equipped with power switch. After connection to power short initialization is performed and then recorder immediately continuously measures and records.

Interval between two subsequent measurements is specified by the user. The interval can be adjusted from 1 to 60 minutes. Memorizing of the first value is synchronized with the internal real time clock, so the record is performed at sharp multiples of minutes, hours and days. E.g. after starting the record with the 15 minute interval the first value is not stored immediately, but after the internal clock gets the status of a quarter, a half or a whole hour.

**Warning:** Connect external probe only to the switched OFF recorder. In opposite case incorrect measurement can be recorded to the memory during connecting the probe.

During setting of record parameters (from instrument keyboard or from the computer) record is stopped till the setting mode is left. If recorder stays in setting mode 5 minutes and no key is pressed and no command from the computer is received, recorder automatically ends up setting mode and record continues.

Demount recorder panel only if power is OFF. In opposite case incorrect measurement can be recorded to the memory during connection.

If recorder is powered only via USB interface from the computer, printout on built-in printer is disabled, because supplied energy is not sufficient for print.

## 4.0 Using of recorder

### 4.1 Recorder controls


Instrument is controlled by the user by means of built-in five button keyboard and graphic display. Important information on recorder state is also indicated by green and red LEDs and enable user to watch recorder from longer distance and at the dark. Blinking green LED RECORD indicates record in progress, blinking red LED ALARM indicates active alarm, i.e. one or both temperatures are outside of adjusted limits or one or both binary channels are in alarm state.

Built-in printer is equipped with paper shift button and dual-coloured LED, which is OFF in usual operation. During printout or printer initialization LED blinks green, if printer is out of paper, LED blinks red.

Recorder is equipped with illumination of display and keyboard for the operation in worse light conditions. Illumination is activated by pressing any keyboard button and it is automatically switched off after about 30 seconds after the last pressing of the keyboard.

Function of keyboard upper row buttons is defined by actual description of each button on the lower LCD line display. Function of lower buttons is fixed. Lower buttons serve always for movement in menu or for change of edited item (upwards, downwards).

#### *Controls and LEDs on the recorder panel*

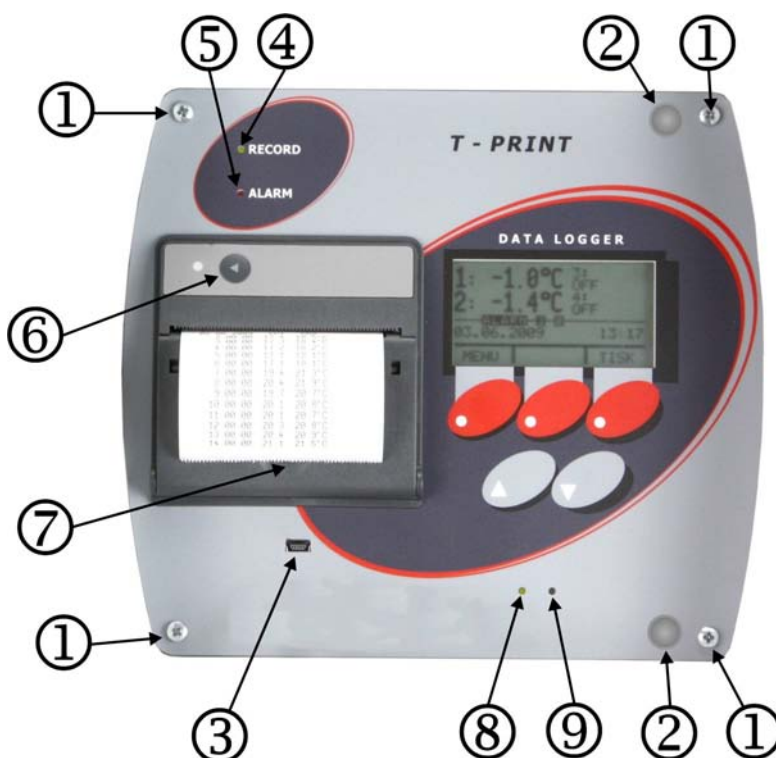

#### Legend:

- 1 – panel fixing screws
- 2 – panel demounting holders
- 3 – mini USB socket for PC connection
- 4 – green LED (indicates record in progress)
- 5 – red LED (indicates active alarm)
- 6 – button for shift of paper
- 7 – safety lock of the printer cover
- 8, 9 – indication LEDs of the optional accessory

## 4.2 Basic display readings

In basic operation LCD displays actually measured value from all channels, date and time of recorder internal clock. If logging mode of average values ( $\phi$ ) or logging mode of min-max-average ( $\phi$  MinMax) are selected, also symbols indicating these modes record. Hyphens (---) on display indicate values outside of instrument measuring range or values sensed with disconnected (optionally damaged) temperature probe.

By pressing buttons  $\triangle$  or  $\nabla$  it is possible to view actually measured values from each channel including user description of the channel.

By pressing button MENU recorder goes to mode of viewing items of main menu. By button PRINT it is possible to start the printout of recorded values on built-in printer. The middle button has dual function: serves for fast pairing of the recorder with wireless alarm unit G9000 (PAIR) and also for muting temporarily audible alarm indication (AUDIO). This button function is active only if new alarm is activated. When audible alarm indication is muted by pressing AUDI button, function of the middle button changes again to PAIR. In this case audible indication is activated again if new alarm appears. For more information on pairing see page 23.

Running alarm state is indicated on display by inverse reading ALARM together with information which channel activated the alarm.

## 4.3 Printout of recorded values on built-in printer

### 4.3.1 Printout of the Delivery Ticket

Delivery Ticket is a short form serving as a document for delivery of transported goods. It contains recorder identification, date and time of the printout and current measured temperature values from both channels. At the lower part there is a space for signature of the responsible person.

Start printing of Delivery Ticket from basic display by pressing PRINT. Then offer of Delivery Ticket, Journey Ticket or Graph Ticket printing is displayed. Select by means of the arrow buttons  $\triangle$  or  $\nabla$  one of the offered item. Confirm Delivery ticket by pressing PRINT and Delivery ticket is printed out.

When request for print is repeated always last time used ticket is offered as first (Delivery Ticket, Journey Ticket or Graph Ticket) to simplify repeated printing.

### 4.3.2 Printout of recorded values

#### 4.3.2.1 Selection of values for printout

Recorded values can be printed in table or graph formats. **Recorded values are printed out always backward - from newest values towards oldest.** If not required (and not adjusted) printout of older values, printout starts with last value recorded in memory.

How many values from the recorder memory will be printed out is defined by the actual recorder setting. If journey has just ended and printout of recorded values from the journey duration is required, two basic settings are available, which also can be combined:

- A) entering of journey duration, i.e. the length of time period to be printed
- B) entering of journey start time, i.e. entering of hour in the day when journey started

**ad A)** setting of journey duration is simplified to entering number of days (1 to 7 days) in offer just before starting the printout or (more precisely, but in more complex way) in hours, in menu item Journey Duration (see page 12)

**ad B)** for printout in one day only in menu item *Journey Start Time* it is enabled to enter journey starting hour (see page 12). If journey start time is not entered (i.e. function is disabled) and

at the same time journey duration is set in number of days, time 0:00 h of last printed day is considered as journey start time.

If both functions are enabled simultaneously in menu of definition printed values from particular time period (i.e. both *Journey Duration* in hours and *Journey Start Time*), the printout will be stopped after at least one condition is valid. If only function *Journey Start Time* is enabled in menu and journey duration is entered just before printing (i.e. in number of days), then adjusted journey start time is relevant only if journey duration is set to one day. If adjusted to more days, recorded values will be printed back to time 0:00 h of the first journey day.

If printout of older values is required, it is activated by entering date (and optionally time) of journey end in menu item *Journey End Date* and *Journey End Time* (see page 14).

Above settings for printout of only particular time period are the same also for printing of older values.

#### 4.3.2.2 Start of print of recorded values

Enter print mode in basic display by pressing PRINT button. Offer of printout of Delivery Ticket, Journey Ticket or Graph Ticket appears. Select one of the offer by buttons  $\Delta$  or  $\nabla$ . After selecting Journey Ticket or Graph Ticket, it is enabled by repeated pressing of button +DAY to select journey duration form 1 to 7 days. Another pressing of button +DAY (indicated by reading >7Day) selects unlimited time period of printout. After confirmation of Journey Ticket by PRINT button printout is started.

In case of selection of *Graph Ticket* you are asked to select required temperature channel. Graphic printout of binary channels is not enabled.

**Notice:** If memory is totally full and printout of oldest recorded values is requested, the delay from button pressing to print start can be up to 13 seconds. It is caused by searching through a large quantity of recorded data.

If button +DAY after selection of Journey Ticket or Graph Ticket does not appear, it means, precise setting of journey duration in hours is used (menu item Journey Duration, see 12).


#### 4.3.2.3 Data contained in numerical table of values - Journey Ticket

Each recorded value (or pair of values for two recorded channels) is printed in table on separate line together with storing time and temperature unit ( $^{\circ}\text{C}$  or  $^{\circ}\text{F}$ ). If recorded value is outside of adjusted limits for proper channel, it is printed in table inversely. Adjusted delay of alarm is ignored in this case. If selected logging mode of average values or logging mode of min-max-average, only average temperature value for interval are printed. Such line is indicated in table by symbol  $\phi$ . Time value in line in such case indicates end of the interval average value was calculated for.

Hyphens (---) in printout indicate values outside recorder measuring range or value sensed with disconnected (optionally damaged) temperature probe. If some channel is disabled for record by the user, dots (.....) are printed-out instead of values of proper channel.

Recorded states of binary inputs are always indicated on the printout as ON or OFF independently on the adjusted description of each state. Assignment of ON / OFF states to descriptions is printed out in the record header printed lastly.


Interruption of record caused by configuration of recorder from keyboard or from computer is indicated in printout line with beginning time of record interruption and by reading *Interrupted–Keyb* or *Interrupted–PC*.

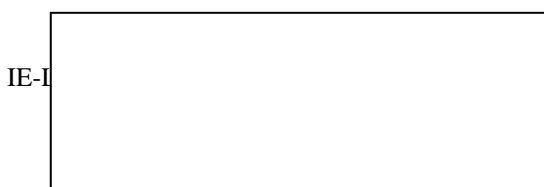

20.04.2008	Ch1	Ch2	Ch3	Ch4	← value recorded in recorder memory
φ 3:00:00	-15.7	-5.2°C	OFF	OFF	
φ 3:30:00	-16.1	-5.1°C	OFF	OFF	
φ 4:00:00	-16.0	-5.5°C	OFF	OFF	← symbol φ indicates record of average values
φ 4:30:00	-15.6	-5.4°C	OFF	OFF	
φ 5:00:00	.....	-5.2°C	OFF	OFF	← dots indicate disabled temperature channel
5:27:15	Interrupted-PC				← record interruption (logger configuration from PC)
6:00:00	-14.2	---°C	OFF	OFF	← hyphens indicate value out of the range (or no probe)
6:12:05	.....	.....	OFF	ON	← change in binary record
6:30:00	-14.8	-5.3°C	OFF	ON	← record of actual values (without symbol φ)
7:00:00	-15.1	-4.2°C	OFF	ON	↑ prints towards older values
7:30:00	-15.7	-5.6°C	OFF	ON	← print start (if history record printout is not set, newest recorded value from memory is here)

#### 4.3.2.4 Data contained in Graph Ticket

Graph can be useful for graphic presentation of longer time sections of temperature with simple evaluation of exceeded alarm limits. Graph is printed lengthwise, always channel by channel. Y axis scale must be preset suitably in accordance with expected temperature values at monitored room. The scale is set for each channel individually.

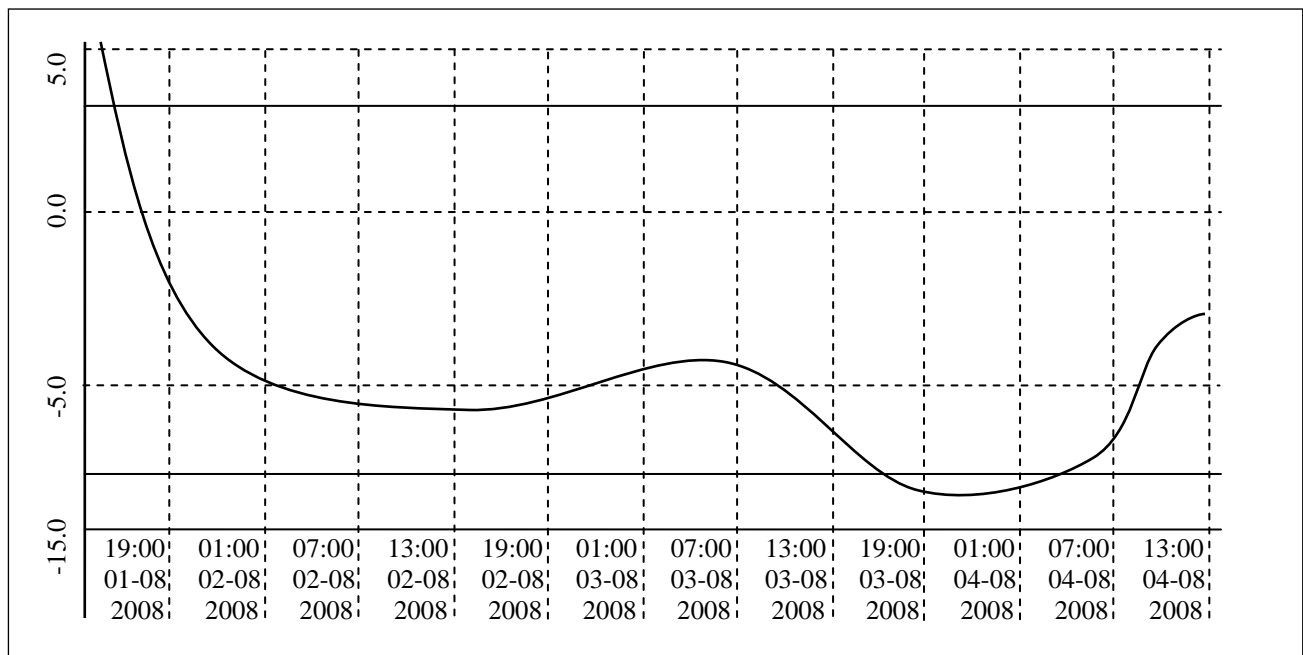

Time values are on the X axis. One segment always represents six recorded values. Figure shows an example of record with 60 minute interval. Vertical dashed line is one time segment and refers to nearer (i.e. left) time value. If recorded values are outside of the selected Y axis scale of the graph, curve not be printed at this area. Alarm limits of the currently printed channel are presented by two continuous lines without any description – alarm limit values are printed-out at the end of the header. If the curve exceeds the alarm line, recorded values are outside of the set limits. If alarm limits are set outside of the graph range, alarm lines are not be visible.

### 4.3.2.5 Stopping of printout of Journey or Graph Ticket

Printout of Journey or Graph Ticket in progress can be stopped:

- manually (anytime, by button CANCEL)
- automatically, if preset journey duration is printed-out already
- automatically, if preset time for print end was exceeded (in menu item *JourneyStartTime*)
- automatically, if all recorded values are printed-out already

At the end of printout always record header is printed. Header enables to identify record accordingly to recorder serial number, its description, its location (must be entered before in recorder) and date of print. Tear off printed-out paper over tear edge of the printer.

**Warning:** if back-up battery of internal clock is low and at the same time recorder was not continuously powered from external source, time reading may not be valid, which is indicated by inverse print of time value.

### 4.3.3 Paper replacement in built-in printer

Last meter of paper in the roll is marked by coloured strip indicating paper will be finished soon. If paper is finished during printout, LED on printer shortly blinks in red and LCD reports *Load paper!* Insert new paper in accordance with described procedure below. After installation of the new roll of paper press shortly shift button on printer (<) and printout will continue.

After inserting new paper pull gently lever on the lid and release printer lid. Pressure roll for paper transport is released from driving gear of printer drive and lid can be opened easily.

Unwind several centimeters of paper from new role and insert it to paper container, thermo-sensitive layer outside. Unwound paper end must stick out from container.

Press strongly printer lid to snap audibly to container lock. Now it is possible to tear off printed-out paper over tear edge of the printer and the lid stays closed. Printer is ready to operation.



## 4.4. Configuration of recorder from built-in keyboard

#### 4.4.1 Main menu

From main menu are directly available functions of print setting, information on record parameters setting, setting of LCD illumination level and menu language selection. For setting of all other parameters it is necessary to enter 4-digit PIN code. Manufacture PIN code is 5555, user can change it anytime.

Move between menu items by means of buttons  $\triangle$  or  $\nabla$ . Go back to basic display button by means of button Escape.

Items of main menu:

- 1.0 Journey Duration
- 2.0 JourneyStartTime
- 3.0 Journey End Date
- 4.0 Journey End Time
- 5.0 Info On Setting
- 6.0 ParameterSeting
- 7.0 Illuminat. Level
- 8.0 Language Select.

##### 1.0 Journey Duration

Defines time period of recorded values to be printed. Set journey duration in whole hours at range from 1 to 255 h, which represents 10.6 days of printed record in maximum. Use button CHANGE and then buttons  $\triangle$ ,  $\nabla$  or  $\triangleright$  for setting itself. Active function it is possible to disable by button DISABL. If function is disabled, print of recorded values will not be limited by this function. If function is enabled at the same time with function JourneyStartTime, print time period can be limited by time adjusted in item JourneyStartTime.

**Attention:** If function Journey Duration is enabled (i.e. duration is set in hours) it is not possible to set journey duration in days - simplified selection of journey duration is disabled and button +DAY does not appear (for more details see page 7).

##### 2.0 JourneyStartTime

Defines time of journey start in whole hours at range from 0 to 23 h. This function enables to print records only from one day, i.e. in actual day or (in print of history) in day of required print (item Journey End Date). Use button CHANGE and then buttons  $\triangle$ ,  $\nabla$  or  $\triangleright$  for setting itself. Active function it is possible to disable by button DISABL. If function is disabled, print of recorded values will not be limited by this function. If function is enabled at the same time with function Journey Duration, print time period can be limited by time adjusted in item Journey Duration.

*Illustration of concurrence of function Journey Duration and JourneyStartTime*

(valid only for setting journey duration in hours , not in days)

Example 1 – setting of time in item JourneyStartTime is irrelevant

3:00:00	-15.7	-5.2°C	← values recorded in recorder memory
3:30:00	-15.7	-5.2°C	
4:00:00	-15.7	-5.2°C	← JourneyStartTime (adjusted to 4:00)
4:30:00	-15.7	-5.2°C	
<b>5:00:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	← Journey Duration is indicated in bold (adjusted to 6 hours)
<b>5:30:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	
<b>6:00:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	
<b>6:30:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	
<b>7:00:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	
<b>7:30:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	
<b>8:00:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	
<b>8:30:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	
<b>9:00:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	
<b>9:30:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	← values to be printed are indicated by frame
<b>10:00:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	
<b>10:30:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	↑ prints towards older values
<b>11:00:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	← print start (if history record printout is not set, newest recorded value from memory is here)

Example 2 – setting of Journey Duration is irrelevant

3:00:00	-15.7	-5.2°C	← values recorded in recorder memory
3:30:00	-15.7	-5.2°C	
4:00:00	-15.7	-5.2°C	
4:30:00	-15.7	-5.2°C	
<b>5:00:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	← Journey Duration is indicated in bold (adjusted to 6 hours)
<b>5:30:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	
<b>6:00:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	
<b>6:30:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	
<b>7:00:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	
<b>7:30:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	
<b>8:00:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	← journey start time (adjusted on 8:00)
<b>8:30:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	
<b>9:00:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	
<b>9:30:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	← values to be printed are indicated by frame
<b>10:00:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	
<b>10:30:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	↑ prints towards older values
<b>11:00:00</b>	<b>-15.7</b>	<b>-5.2°C</b>	← print start (if history record printout is not set, newest recorded value from memory is here)

### 3.0 Journey End Date

Function served for printout of older history values in memory. Defines day required values will be printed out. Function is available for print of older values stored in memory. Use button CHANGE and then buttons  $\triangle$ ,  $\nabla$  or  $\triangleright$  for setting itself. Active function it is possible to disable by button TODAY (i.e. it prints always from actual date and time to the history) Function it is possible to use in parallel with functions Journey Duration and JourneyStartTime. Function Journey End Date is directly related to function Journey End Time, which precisely defines time of print in selected day.

#### 4.0 Journey End Time

Defines time of recorded value, from which (towards older recorded values) print will be started. This function is usable only for print of older values in memory and is enabled or disabled together with function Journey End Date. Disabled function is indicated by reading Today (i.e. prints always from actual date and time to the history). Use button CHANGE and then buttons  $\triangle$ ,  $\nabla$  or  $\triangleright$  for setting itself. Function Journey End Time is directly related to function Journey End Date, which defines date of print start for selected time.

*Example, how menu items for print control (Journey Duration, Journey Start Time, Journey End Date, Journey End Time) influence the printout of recorded values table.*

YOUR COMPANY		
T-PRINT G0221 FW:01.40		
Ser.Num.: 09970003		
Location: Vehicle BN CC230		
Printed: 03.04.2009 11:09		
Ch1: Frozen section		
Ch2: Chilled section		
03.04.2009	Ch1	Ch2
3:00:00	-15.7	-5.2°C
3:30:00	-15.7	-5.2°C
4:00:00	-15.7	-5.2°C
4:30:00	-15.7	-5.2°C
5:00:00	-15.7	-5.2°C
5:30:00	-15.7	-5.2°C
6:00:00	-15.7	-5.2°C
6:30:00	-15.7	-5.2°C
7:00:00	-15.7	-5.2°C
7:30:00	-15.7	-5.2°C
8:00:00	-15.7	-5.2°C
8:30:00	-15.7	-5.2°C
9:00:00	-15.7	-5.2°C
9:30:00	-15.7	-5.2°C
10:00:00	-15.7	-5.2°C
10:30:00	-15.7	-5.2°C
11:00:00	-15.7	-5.2°C

Example was made with this setting:

Journey Duration: *disabled*

Journey Start Time: *3:00*

Journey End Date: *Today*

Journey End Time: *From Now*

← record printout is always ended up by header

← which value is printed as last is influenced also by setting of parameter **Journey Start Time** (setting is relevant only for single day intervals)

← number of printed values is influenced also by setting of parameter **Journey Duration** (can be set in number of days or in hours)

↑ prints towards older values

← which value is printed as first is influenced only by setting of parameter **Journey End Date and Journey End Time**

(if printout of older records is not set, parametr is set to „Today“ and „From Now“)

#### 5.0 Info On Setting

This function enables to view all recorder settings protected by PIN code. Move between setting items by buttons  $\triangle$ ,  $\nabla$ . Button NEXT enables quick move between General setting selections, Setting of channel 1 and Setting of channel 2.

#### 6.0 ParameterSetting

Access to this menu item is protected by PIN code. If PIN is entered correctly, record stops till the end of setting mode. If recorder stays in setting mode 5 minutes and no key is pressed and no command from the computer is received, recorder automatically ends up setting mode and record continues.

#### 7.0 Illuminat. Level

This function enables to change illumination intensity of LCD display from 0 to 100% with 10% step. Level 0% means illumination permanently disabled, 100% is maximum level of illumination. Use buttons  $\triangle$ ,  $\nabla$  or  $\triangleright$  for setting itself, selected level confirm by button STORE. Illumination is activated by pressing any keyboard button and is switched off automatically after 30 seconds.

#### 8.0 Language Select.

This function enables to select one from the maximum 15 languages of recorder menu. E.g. following languages can be selected: English, German, French, Italian, Polish, Dutch, Spanish, Portuguese, Romanian, Czech. Select language by buttons  $\triangle$  or  $\nabla$ , confirm selected language by button STORE.

#### 9.0 Alarm unit

This function enables to switch on or switch off the sender of wireless alarm unit (optional accessory) or to pair recorder with particular alarm unit. Press CHANGE button. Then buttons  $\triangle$ ,  $\nabla$  enable to switch on the sender (indicated display serial number of target alarm unit). Or buttons  $\triangle$ ,  $\nabla$  enable to switch off the sender (indicated by reading switched OFF). Pairing of recorder with new alarm unit is started after pressing PAIR button. For more information on alarm unit see page 23.

**Notice:** running of the pairing function from this menu interrupts the measurement and record, do not run it for no reason! If pairing function is not finished correctly up to 60 s, function automatically ends and record continues.

## 4.4.2 Menu 6.0 ParameterSetting

### 6.1 General Setting

Menu Item *General Setting* concerns entire recorder (all channels). Movement in menu *General Setting* is indicated in upper part of the display by symbol of a mounting spanner.

#### 6.1.1 Logging interval

Defines interval, for storing of values from both temperature channels to internal memory. Memorizing of the first value is synchronized with the internal real time clock, so the record is performed at sharp multiples of minutes, hours and days. E.g. after starting the record with the 15 minute interval the first value is not stored immediately, but after the internal clock gets the status of a quarter, a half or a whole hour. First interval after switching on the recorder (or after parameter setting) is always shorter. Set logging interval by pressing button CHANGE and by selection from preset values by means of buttons  $\triangle$  or  $\nabla$ . Store selected interval by button STORE.

#### 6.1.2 Alarm Audio

This menu item enables to disable/enable audible alarm indication. If audible indication is enabled, in active alarm state every 10 seconds warning signal sounds. Sound is possible to switch OFF temporarily by button AUDIO (if new alarm is activated signal sounds again). If audible indication is disabled, warning signal does not sound.

#### 6.1.3 Logger Location

Enables to enter description of recorder location with 16 characters. Description will be visible on each printout from built-in printer. Edit text after pressing button CHANGE. Edited character je indicated from above and below by arrows and change is enabled in alphabetical order by buttons  $\triangle$ ,  $\nabla$ . Optionally it is possible to swap between capital letters and lower case letter or symbols by means of button 1-A-a. Space character is first character of symbols and follows after last character of lower case letters (z). Digits are part of symbols. Shift to another edited character in text string by button  $\triangleright$ . Standard offering STORE (to store edited text) or CANCEL (to end editing without storing) are available after pressing button NEXT.

#### 6.1.4 Header Text

Can contain e.g. your company name and it is printed-out always at the first line of the header of the printout of measured values. Edit text after pressing button CHANGE. Editing is identical as in item Logger Location (see above).

#### 6.1.5 Set Date

If there is a need to change the date in recorder internal clock, enter editing mode by button CHANGE. Edited digit is indicated from above and below by arrows and it is possible to change it by buttons  $\triangle$  or  $\nabla$ . Instrument does not allow to set values outside of interval 01 to 31 for day and 01 to 12 for month. Shift to another edited digit by button  $\triangleright$ . Only two last digits in range 00 to 99 are editable in year indication. Use button STORE to store edited date to recorder internal clock or button CANCEL to end editing without storing.

#### 6.1.6 Set Time

If there is a need to change the time in recorder internal clock, enter editing mode by button CHANGE. Edited digit is indicated from above and below by arrows and it is possible to change it by buttons  $\triangle$  or  $\nabla$ . Instrument does not allow to set values outside of interval 00 to 23 for hour and 00 to 59 for minute. Shift to another edited digit by button  $\triangleright$ . Use button STORE to store edited time to recorder internal clock (seconds will be zeroed) or button CANCEL to end editing without storing.

### 6.1.7 Temperature Unit

This menu item enables after pressing button CHANGE to select between two temperature units: °C or °F. Recorder works with selected temperature unit in measurement (value on display), record to recorder memory and in alarming (adjusted limits). Change the used temperature unit by buttons  $\triangle$  or  $\nabla$ . Use button STORE to store selected unit to recorder or button CANCEL to end unit selection without storing.

### 6.1.8 Logging mode

Enables to select by means of buttons  $\triangle$  or  $\nabla$  one of three available logging modes:

- **actual**, when actually measured value is recorded at the moment of logging interval
- **average**, when average value of temperature measured during adjusted logging interval is recorded. Temperature is measured in fixed interval 5 s.
- **min-max-average**, when average value of temperature measured during adjusted logging interval (same as above) accompanied by minimum and maximum temperature in logging interval. Recorded min. and max. values are available after data download to computer. Printout on built-in printer is not enabled.

Use button STORE to store selected logging mode to recorder or button CANCEL to end logging mode selection without storing.

### 6.1.9 PIN Change

This menu item enables user to change anytime four-digit PIN code. Edited digit is indicated from above and below by arrows and it is possible to change it by buttons  $\triangle$  or  $\nabla$ . Other digits are hidden (replaced by symbol asterisk). Shift to another edited digit by button  $\triangleright$ . Use button STORE to store PIN to recorder or button CANCEL to end PIN change without storing.

**Remember new PIN well, there is no universal code to unblock the instrument!**

## 6.2 (6.3) Setting of channel 1 or channel 2

Following parameters concern each channel and can be adjusted separately for each channel. Adjusted menu items are identical for both temperature channels. Setting of proper channel is indicated at the LCD upper part by symbol of mounting spanner with digit indicating adjusted channel.

### 6.2(3).1 Chan.Description

Enables to enter description of location of temperature probe for proper channel with 16 characters. Description will be visible on each printout from built-in printer. Edit text after pressing button CHANGE. Edited character je indicated from above and below by arrows and change is enabled in alphabetical order by buttons  $\triangle$ ,  $\nabla$ . Optionally it is possible to swap between capital letters and lower case letter or symbols by means of button 1-A-a. Space character is first character of symbols and follows after last character of lower case letters (z). Digits are part of symbols. Shift to another edited character in text string by button  $\triangleright$ . Standard offering STORE (to store edited text) or CANCEL (to end editing without storing) are available after pressing button NEXT.

### 6.2(3).2 Upper AlarmLimit

Enables after pressing button CHANGE to set upper temperature limit of proper channel. After exceeding the limit alarm delay is counted. If specified delay time value is exceeded, alarm is activated (visually, optionally acoustically). Value of alarm limit is adjustable at the range -130 to +500. Temperature unit of alarm limit depends on setting of temperature unit in general setting. After change of temperature unit adjusted values of alarm limits remain without change!

Edited digit of alarm limit is indicated from above and below by arrows and it is possible to change it by buttons  $\triangle$  or  $\nabla$ . Shift to another edited digit by button  $\triangleright$ . Use button STORE to store alarm limit to recorder or button CANCEL to end alarm limit adjustment without storing.

### 6.2(3).3 Lower AlarmLimit

Adjustment of lower alarm limit is analogical with above setting of upper alarm limit.

#### 6.2(3).4 Alarm Delay

Enables to set after pressing button CHANGE at the range of 0 to 60 minutes. Delay is counted from the moment when measured temperature of proper channel exceeds adjusted alarm limit. If temperature during delay counting returns to adjusted limits, delay is counted after new exceeding of alarm limits again from the beginning. After elapsing of adjusted delay visual, optionally audible alarms are activated.

Edited digit of alarm delay is indicated from above and below by arrows and it is possible to change it by buttons  $\triangle$  or  $\nabla$ . Shift to another edited digit by button  $\triangleright$ . Use button STORE to store alarm delay to recorder or button CANCEL to end alarm delay adjustment without storing.

#### 6.2(3).5 Alarm ON/OFF

Enables to disable the evaluation of alarms by setting this item to „disabled“. Alarms of this channel then will not be evaluated and adjusted values of alarm limits and alarm delay are irrelevant. Change the state of alarm evaluation after pressing button CHANGE. Select value „enabled“ or „disabled“ by means of buttons  $\triangle$  or  $\nabla$ . Use button STORE to store alarm evaluation to recorder or button CANCEL to end alarm evaluation adjustment without storing.

#### 6.2(3).6 Channel Record

Enables to disable proper channel for record (e.g. if temperature probe is permanently disconnected). Capacity of recorder memory is then available for another channel. At least one temperature channel must be enabled for record. It is not allowed to disable both channels at the same time! Change the state of channel logging after pressing button CHANGE. Select value „enabled“ or „disabled“ by means of buttons  $\triangle$  or  $\nabla$ . Use button STORE to store channel logging to recorder or button CANCEL to end channel logging adjustment without storing.

#### 6.2(3).7 Graph Y axis min

It is useful for graph print to preset graph Y axis scale in accordance with expected temperature values at monitored room. Set minimum of the Y axis scale of the proper channel after pressing of the CHANGE button. Value is adjustable from the range -130 to +500, temperature unit is defined by set temperature unit in general setting. After temperature unit change the set value of the Y axis scale remains the same !

Edited digit of scale value is marked by arrows from below and above and can be changed by  $\triangle$  or  $\nabla$  buttons. Shift to next edited digit by button  $\triangleright$ . Press button STORE to save new Y axis scale value to recorder. Press button CANCEL to leave without saving changes.

#### 6.2(3).8 Graph Y axis max

Here it is possible to preset maximum of the Y axis scale of the proper channel in analogical way as described above.

### 6.4 (6.5) Setting of channel 3 or channel 4

Following parameters concern channels 3 and 4 and can be set variously for each channel. Adjustable menu items of both binary channels are identical. Setting of proper channel je indicated in display upper part by symbol of mounting key with digit indicating channel under setting.

#### 6.4(5).1 Chan.Description

is carried out identically as with temperature channels, see setting 6.2(3).1 above.

#### 6.4(5).2 StateOFF Dscrptn

Here it is possible to enter description of binary state OFF (i.e. switch opened) of proper binary channel in 8 characters length. Description will be visible on display and in header of each printout from built-in printer. It is possible to edit text after pressing button CHANGE. Edited character is marked from above and below by arrows and is editable in alphabetical order by buttons  $\Delta$ ,  $\nabla$ . Optionally it is possible to switch easily between lower and upper case letters or symbols by means of button 1-A-a. Space is the first character of symbols and follows the last character of lower case alphabet (z). Digits are the part of symbols. Move to another edited character in text string by button  $\triangleright$ . Standard offer STORE (for saving edited text) or CANCEL (to exit editing without saving) is available after pressing button NEXT.

#### 6.4(5).3 State ON Dscrptn

Here it is possible to enter description of binary state ON (i.e. switch closed) of proper binary channel. The procedure is identical with above description of state OFF.

#### 6.4(5).4 Alarm Delay

The procedure is identical as with temperature channels, see setting 6.2(3).4 above.

#### 6.4(5).5 Alarm ON/OFF

The procedure is identical as with temperature channels, see setting 6.2(3).5 above.

#### 6.4(5).6 Channel Logging

The procedure is identical as with temperature channels, see setting 6.2(3).6 above.

#### 6.4(5).7 Alarm Active If

If alarm of proper binary channel is in use, it is necessary to set, which binary state (ON or OFF) will activate the alarm.

Set this after pressing button CHANGE. Switch between values „ON“ and „OFF“ by means of buttons  $\Delta$  or  $\nabla$ . If binary state description was entered before, corresponding description is displayed for easy orientation when switching states „ON“ and „OFF“. Save new setting to the recorder by button STORE or leave the mode without saving by button CANCEL.

### 4.4.3 Structure of menu

<b>1.0</b>	<b>Journey Duration</b>	xx Hour / Disable	(1-255hours i.e. 10.6 days), controlled by buttons TIME and DISABL
<b>2.0</b>	<b>JourneyStartTime</b>	xx:00 Hour / Disable	(0-23hours), controlled by buttons TIME and DISABL
<b>3.0</b>	<b>Journey End Date</b>	xx.xx.20xx / Today	(1.1.2000-31.12.2099) controlled by buttons DATE and TODAY
<b>4.0</b>	<b>Journey End Time</b>	xx:00 Hour / From Now	(0-23hours) activated analogically with previous selection
<b>5.0</b>	<b>Info On Setting</b>	Submenu...	(only viewing of adjusted parameters)
<b>6.0</b>	<b>ParameterSetting</b>	Submenu...	(protected by PIN, stops the record, after completion of setting resets the recorder)
<b>7.0</b>	<b>Illuminat. Level</b>	0-100%	
<b>8.0</b>	<b>Language Select.</b>	15 selections maximum	
<b>9.0</b>	<b>Alarm Unit</b>	Disable / serial number of target alarm unit	
<b>5.1</b>	<b>General Setting</b>	5.1.1	Logging Interval, Alarm Audio
		5.1.2	MemoryOccupation, Logging Mode
		5.1.3	Temperature Unit, Logger Type
		5.1.4	Logger Location, Header Text
		5.1.5	Ser.Num., FW vers., Menu Vers., PC Driver State
<b>5.2</b>	<b>Setting Of Channel 1</b>	5.2.1	Upper AlarmLimit + Lower AlarmLimit
		5.2.2	Alarm Delay, Alarm ON/OFF
		5.2.3	Sensor Type, Channel Logging
<b>5.3</b>	<b>Setting Of Channel 2</b>	5.3.1	Upper AlarmLimit + Lower AlarmLimit
		5.3.2	Alarm Delay, Alarm ON/OFF
		5.3.3	Sensor Type, Channel Logging
<b>6.1</b>	<b>General Setting</b>	6.1.1	Logging Interval 1,2,3,4,5,10,15,20,30,60 min
		6.1.2	Alarm Audio Enable / Disabled
		6.1.3	Logger Location 16characters max (vehicle number,...)
		6.1.4	Header Text 16characters max (e.g. company name)
		6.1.5	Set Date 25.09.2008
		6.1.6	Set Time 15:11 Hour
		6.1.7	Temperature Unit °C / °F
		6.1.8	Logging Mode Actual Values / Average/Interval / Min-Max-Average
		6.1.9	PIN Change
<b>6.2</b>	<b>Ch1 Setting</b>	6.2.1	Chan.Description 16 characters max
		6.2.2	Upper AlarmLimit xxx.x °C/F (adjustable -130 to 500)
		6.2.3	Lower AlarmLimit xxx.x °C/F (adjustable -130 to 500)
		6.2.4	Alarm Delay 0-60 min
		6.2.5	Alarm ON/OFF Enable / Disable
		6.2.6	Channel Logging Enable / Disable
		6.2.7	Graph Y axis min xxx.x°C/F (adjustable -130 to +500)
		6.2.8	Graph Y axis max xxx.x°C/F (adjustable -130 to +500)
<b>6.3</b>	<b>Ch2 Setting</b>	6.3.1	All items identical with Ch1 Setting
		to	
		6.3.8	
<b>6.4</b>	<b>Ch3 Setting</b>	6.4.1	Chan.Description 16 characters max
		6.4.2	StateOFF Dscrptn 8 characters max
		6.4.3	State ON Dscrptn 8 characters max
		6.4.4	Alarm Delay 0-60 min
		6.4.5	Alarm ON/OFF Enable / Disable
		6.4.6	Channel Logging Enable / Disable
		6.4.7	Alarm Active If ON (description) / OFF (description)
<b>6.5</b>	<b>Ch4 Setting</b>	6.5.1	All items identical with Ch3 Setting
		to	
		6.5.7	

## 5.0 Functions of the recorder connected to the PC

### 5.1 Installation of program for personal computer

Installation program is common for both versions of user program, i.e. basic (freeware) and optional (paid). Installed user program during first run asks installation code - if code is entered, program runs as optional version. If installation code is not entered, program se runs in basic version. Installation code can be entered anytime later.

Installation program is available for free at the Internet address [www.cometsystem.cz](http://www.cometsystem.cz) or can be ordered on the CD as the optional accessory.

- installation from the Internet:  
visit [www.cometsystem.cz](http://www.cometsystem.cz) and click to link *Programs*. Download *Program for dataloggers Comet* to your computer. If you are going to run program on a PC with older operating system (Windows98 or ME), download also item *USB adapter – driver* (optionally also with file with installation description). After running downloaded file *logger.exe* follow the Installer instructions.
- installation from installation CD:  
Insert installation CD to CD-ROM drive and wait for automatic Installer run. If Installer is not run automatically (depends on setting of operating system), find in file browser file *CDSSetup.exe* in main directory of the installation CD and click to run. Follow Installer instructions. Select *Program for dataloggers* from the menu.

In both cases tick during installation offered selection *Install driver for USB adapter* (valid only for Windows2000 and newer operating systems. Older operating systems require driver installation after first recorder connection to the PC). Driver installation procedure and troubleshooting of optional problems is described for each operating systems in *USBxxxx.pdf* file on the installation CD and also at the website.

Recorder is connected to USB interface of the computer, but user SW communicates with recorder by means of the virtual serial port. Check, if adjusted COM port number in driver properties „USB Serial Port“ is at the range COM1 to COM8, program does not support higher port numbers. If needed correct the setting: open driver features „USB Serial Port“ by pressing right mouse button on this driver in Device manager and by selection of item *Properties*. Select card „Port Settings“ and press button „Advanced...“ on the card and select free port at the range 1 to 8.

### 5.2 Recorder configuration by means of personal computer

Before starting the recorder operation, it is necessary to set recorder parameters and other functions from the instrument keyboard or by means of the PC program. Some of the settings are possible to do only from the PC program. Recorder connected to the computer is not necessary to power from external source.

After connection of the recorder to the computer by means of the included communication cable run installed *Program for dataloggers*. Select menu item *Configuration / Device setting*. An info window appears with actual recorder configuration. Bookmark *Logger setting* enables all general settings. Bookmark *Channels* enables setting of channels one by one.

Bookmark *Channels* also enables setting of the type of temperature sensor (Pt1000 or Ni1000) and *Probe cable length correction*. Both parameters must be correctly set for both channels from the PC program - setting from the recorder keyboard is not enabled. Incorrect setting causes incorrect temperature measurement! Standard sensors of the delivered probes are Pt1000 (specified on the probe label). For the correction of probe cable length it is necessary to enter probe cable length (specified on the probe label) and the conductor area of the cable wires. For standard probes Pt1000TR160 the conductor area of the cable wires is  $0.14\text{mm}^2$ .

After correct entering of parameters store new setting to the recorder by clicking *Write to logger* button.

### 5.3 Reading of recorded data

For recorded data download from recorder to the computer connect instrument to the computer by means of the communication cable and run user program.

Select menu item *File / From recorder*, confirm offered file name and click to *Store*. It is also possible here to enter suitable description of file with recorded data and select, if memory of recorder after data transfer will be erased or recorded data remains in memory. Data transfer to the computer follows. After finishing table of recorded values appears.

Analogous way enables to open archived recorded data file in the computer anytime. Use menu item *File / From disk* and select required file.

Hyphens instead of measured values in the table indicate values outside of the measuring recorder range, optionally not connected temperature probe. If min-max-average record is not selected, columns Min and Max for both channels in the table are empty (min and max values are not recorded).

Often the graphic presentation of recorded data can be more suitable. Graphs are accessible after data download from the instrument or computer hard disk by selection of menu *View / Graph*.

### 5.4 Erasing of recorded data

Recorded data in recorder can be erased by means of the computer by selection *Configuration / Erasing of recorder memory* or by confirmation the offer during data transfer.

Data logging works in cyclic mode. That is why it is not necessary to erase the data - if memory is filled older recorded values are overwritten by newer values.

### 5.5 Upgrade of recorder internal firmware

If manufacturer releases newer firmware version (FW), user can upload FW from computer to recorder by means of USB interface. For FW upgrade it is necessary:

- to download file with FW for G0841 recorder (\*.gfw) from manufacturer's website.
- to connect recorder to the PC and by means of user program upload new FW by selection menu item *Service / T-Print firmware update*. Then follow instructions from the PC.
- during operation you will be asked to switch recorder to the communication mode for FW upload. This is made by the following procedure:
  - select recorder menu item *ParameterSetting*, enter and confirm by PIN code.
  - in setting menu (indicated by symbol of a spanner) simultaneously press and hold buttons  $\triangle$ ,  $\nabla$  and the middle button (display reading is indifferent after pressing keys).
  - while holding pressed three buttons, press button END.
  - recorder display switches off and green LED RECORD switches on permanently (now it is possible to release buttons).
- next step is to press NEXT button on the computer. Firmware transfer will start.
- During upload do not disconnect recorder power nor press any button.
- it is possible to leave FW upload mode (if data transfer from the PC was not started yet) by pressing right upper button below LCD (green LED switches off, recorder initialization runs and recorder switches to basic display, green LED starts to blink). If upload proceeds correctly, the FW upload mode will be cancelled automatically from the PC after finishing the operation.

**Attention:**

menu item Service is available in program only if program is run with parameter **/servis**

## 6.0 Replacement of back-up battery

If back-up battery of internal clock is low and at the same time instrument was not continuously powered from external source, time reading is not valid. This is indicated by inverse printout of time value. Used battery is button battery 3 V, type CR2032 - located in holder under instrument bottom cover.

### *Replacement procedure:*

- disconnect recorder from power (e.g. by removing fuse from truck fuse box)
- open recorder lid and unscrew four corner screws on internal panel. Remove carefully the panel with the whole electronics out by pulling of the two demounting holders.
- remove old battery from the holder by means of a suitable flat screwdriver
- insert new battery with **correct polarity** (+ pole of the battery must be visible from above)
- push in the panel with electronics back to the case by means of the demounting keys and bottom it out. Unscrew demounting keys, blind two openings by seals and fix panel with four corner screws.
- insert fuse to fuse box – recorder is now switched on and would start to work.
- set internal real time clock in recorder (from the keyboard or from the computer)

**Liquidate discharged battery ecologically !**

## 7.0 Wireless alarm unit G9000 (optional accessory)

### 7.1 Basic features of wireless alarm unit

Device works as a remote display of temperature recorder G0841 (further only „recorder“). Recorder is primarily designed for installation on semi-trailer of a truck. Thanks to wireless connection alarm unit enables comfortable monitoring of recorder state in a cabin of semi-trailer truck.

After activation of sending function in recorder following values are transmitted to the unit: temperature values measured by both temperature channels and information on both binary channels states, including alarms on all four channels. Data are displayed on a dual line LCD display, alarms are indicated by blinking of red LED and by audio signal. Above information is transmitted in 5 minutes interval. For more information see Instruction Manual for alarm unit G9000.

### 7.2 Pairing of wireless alarm unit

- alarm unit is switched off
- in basic display of G0841W recorder press button PAIR. Confirm „Really New Unit?“ key by OK. Record will be for 1 minute interrupted and display shows „WaitingForSignal“. Recorder is now in the reception mode and waits for data from alarm unit.
- Right now switch on alarm unit: up to 5 seconds information on serial number of alarm unit sending pairing signal would appear on the temperature recorder LCD. Check if serial number on the alarm unit label is correct and if so, confirm new setting STORE key. If information on serial number of alarm unit does not appear up to about 10 s, repeat switching OFF and

switching ON of alarm unit. If pairing mode is not ended correctly, it is ended up after 60 s automatically.

- Recorder would up to 10 s send data to selected alarm unit address: check the display of alarm unit, if hyphens are replaced by measured values and if last four digits of serial number of the correct recorder appear (indicated by „From“).
- Recorder now sends data every 5 min to the selected alarm unit address. Henceforth it is possible to switch OFF and switch ON again the unit without any effect to setting of pairing. Pairing information is stored only in the recorder

**Notice:** alarm unit works only with recorder models G0841W, optionally G0841MW, which are equipped with wireless radio sender.

## 8.0 Technical parameters

### 8.1 Technical parameters of the recorder:

Measuring range of the RTD Pt1000/3850ppm input: -90 to +260 °C

Measuring range of the RTD Ni1000/6180ppm input: -50 to +250 °C

Certified range in accordance with EN12830: : -50 to +50 °C

Resolution: 0.1 °C/°F (for °F is in interval -130 to -100 °F resolution 1 °F)

Accuracy of temperature inputs (without probes - valid both for inputs Pt1000 and Ni1000): ±0.2 °C in full range

Accuracy of the instrument with connected temperature probe is defined by the above input accuracy and accuracy of the used probe.

Temperature unit: °C or °F

Maximum length of the probe cable: 10 m

Type of connectable probe: with RTD sensor Pt1000/3850 ppm or Ni1000/6180 ppm

Recommended probe: Pt1000TR160/0 (probe with protection IP67, range -30 to +80 °C)

Connection of temperature probe: to terminals with two-wire shielded cable

Connection of switches to binary channels: to terminals, two-wire shielded cable

Maximum conductor area connectable to terminals: 2,5 mm<sup>2</sup>

Maximum length of probe cable: 20 m

Current through binary channel switches: cca 0.3 mA

Logging interval of measured values to memory: 1 min to 60 min (10 selections)

Memory capacity: 102 400 records each channel (both temperature channels enabled)

172 032 records, if only one temperature channel is enabled

Specified number of records is maximum possible and can be achieved only, if record from memory erasing was not interrupted by new setting and if logging mode of actual or average values is selected. In logging mode average+min+max values number of records is approximately 3 times lower. If binary channels are enabled, then every change on binary input causes drop of remaining memory capacity approximately of 0.6 record (both temperature channels enabled) or of 1 record, if only one temperature channel is enabled.

Communication with computer: USB port or built-in GSM modem (optionally) or RS232 (optionally)

Real time clock: adjustable from the computer, integrated calendar including leap years

Accuracy of internal clock: < 200 ppm (i.e. 0.02 %, 17.28 s in 24 h)

Consumption without display illumination:

model G0841 not printing approximately 100mW,

models G0841M, G0841W not printing approximately 200mW,

during print 8W maximum

Radio frequency of the sender (optional accessory): 868 MHz (unlicensed band)

Protection: IP65

Operating conditions:

Power: external source 9 to 32 V dc and back-up battery of internal clock 3V CR2032

Operating temperature range of data logger: -30 to +65 °C (at temperature below -20 °C display must not be readable)

Operating temperature range of built-in printer: -20 to +50 °C

Operating humidity range of the instrument: 5 to 85 %RH (without condensation)

External characteristics in accordance with EN33-2000-3: normal with the specifications

NM: AE1, AN1, AR1, BE1

Working position: horizontally or vertically

Mounting of instrument: 4x screw diameter 5 mm

Not allowed manipulation: case lid must not be opened (protection against water is guaranteed only if case is closed).

Limit conditions:

Power: external source -36 to +36 V dc

Limit temperature range of instrument: -30 to +70 °C

Limit humidity range of instrument: 0 to 100 %RH

Storing conditions: temperature -40 to +85 °C, humidity 0 to 100 %RH

Dimensions: 250 x 242 x 110 mm

Weight including battery (without probes): approximately 1650 g

Material of the case: PA, lid PC

Paper for printer: width 57 mm, length 10 m, i.e. approximately 3400 printed lines

## **8.2 Instrument passed through tests of electromagnetic compatibility (EMC):**

Device conforms in accordance with EN 61326-1 these norms:

radiation: EN 55011 Class B

immunity: EN 61000-4-2 (levels 4/8 kV, Class A)

EN 61000-4-3 (intensity of electric field 3 V/m, Class A)

EN 61000-4-4 (levels 1/0.5 kV, Class A)

EN 61000-4-5 (levels 1/0.5 kV, Class A)

EN 61000-4-6 (intensity of electric field 3 V/m, Class A)

## **8.3 Technical support and service of the instrument**

Technical support and service is ensured by the distributor of this instrument.